



## ◆ Installing and Removing Pickup Rollers

**1** Open the upper scanner.


**2** Open the roller cover.

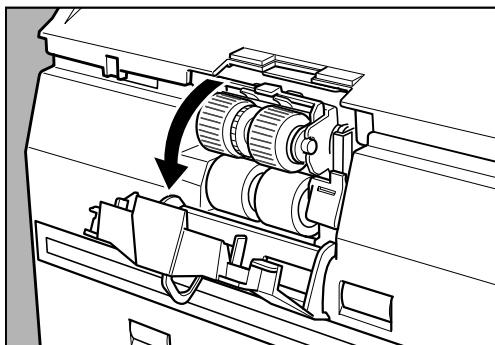


**3** Open the roller holder and remove the pickup rollers.

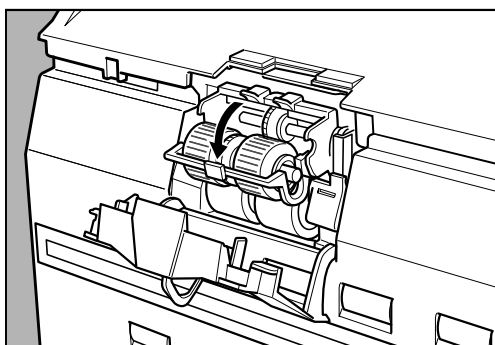


**4** Position the square axle of the pickup roller on the left and insert the new pickup rollers.

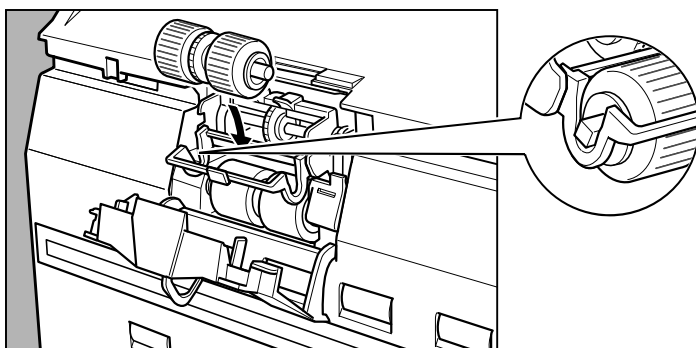

**5** Firmly close the roller holder until you hear it click.

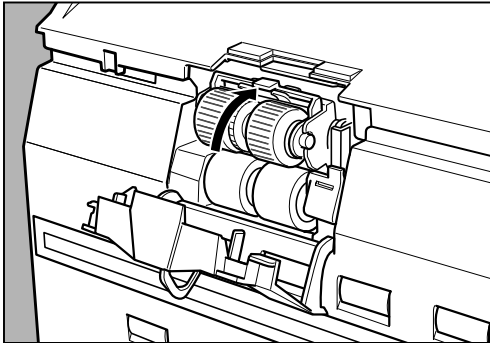

**6** Firmly close the roller cover until you hear it click.

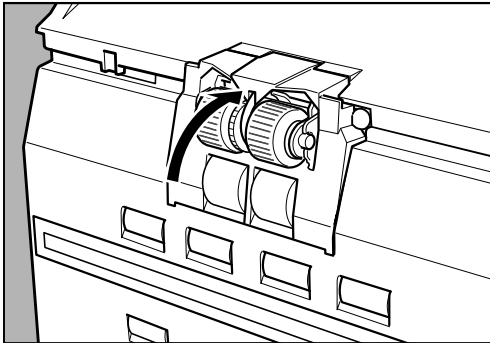

**7** Carefully close the upper scanner.




Important

If the roller holder and roller cover are not firmly closed it will cause a feed error.  
Always be sure to check that the roller holder and roller cover are closed.


## ◆ Installing and Removing Feed Rollers

**1** Open the upper scanner.


**2** Open the roller cover.

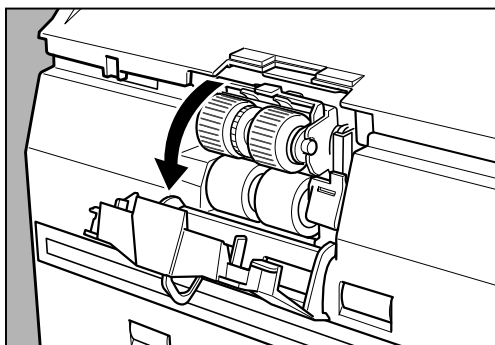


**3** Pull the lever that locks the feed rollers in place towards you.

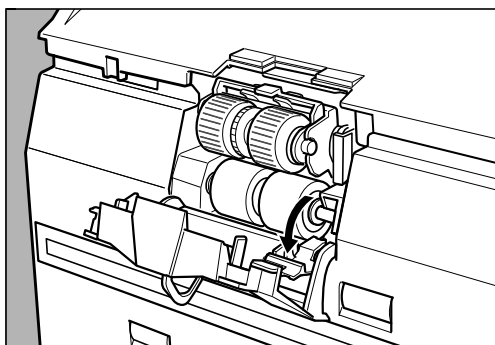


**4** Slide the feed rollers to the right, and then pull them towards you.

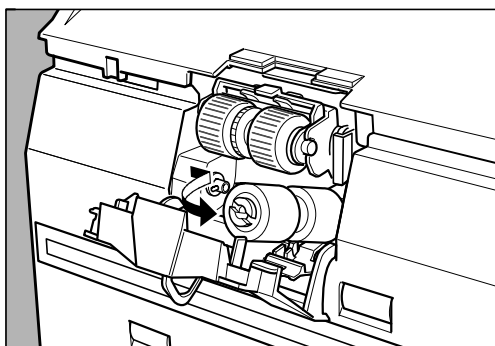


## 5 Remove the feed rollers.

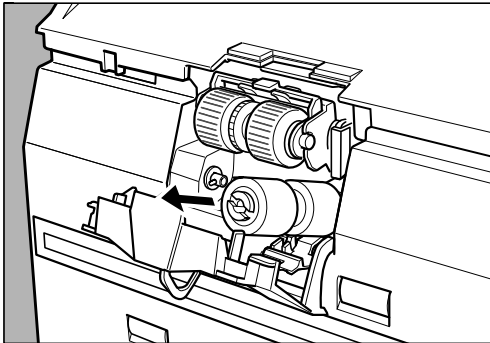


## 6 Place the new feed rollers on the pin.

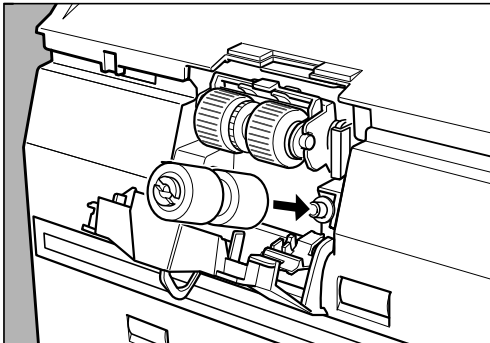


## 7 Set the feed rollers in place (①), and align the notch in the roller's axle with the shaft on the scanner (②).

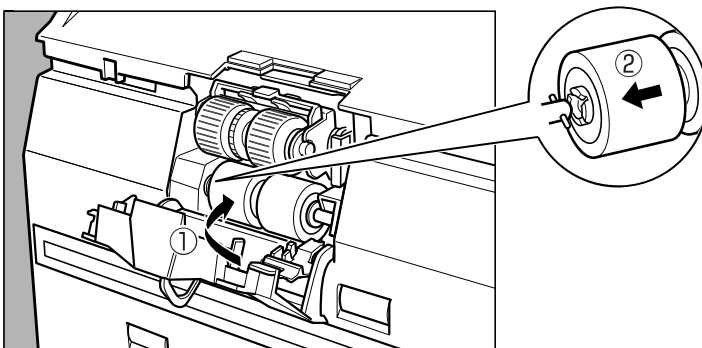

## 8 Lock the lever.

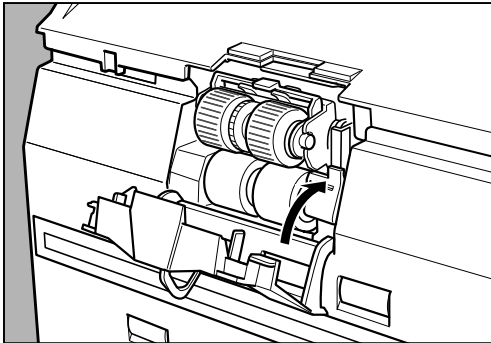

## 9 Firmly close the roller cover until you hear it click.

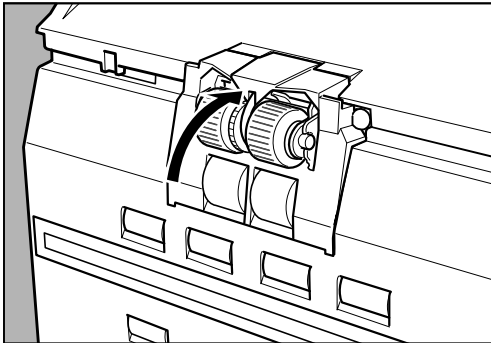

## 10 Carefully close the upper scanner.




Important

If the roller cover is not firmly closed it will cause a feed error. Always be sure to check that the roller cover is closed.


## ◆ Installing and Removing Retard Rollers

**1** Open the upper scanner.


**2** Remove the roller cover.

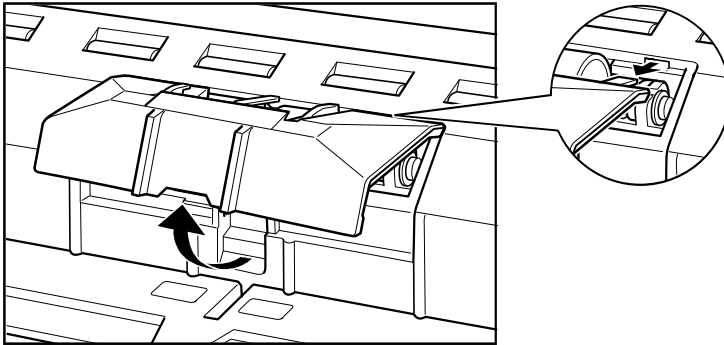


**3** Lift the roller clamp lever (①) and slide it to the left (②).

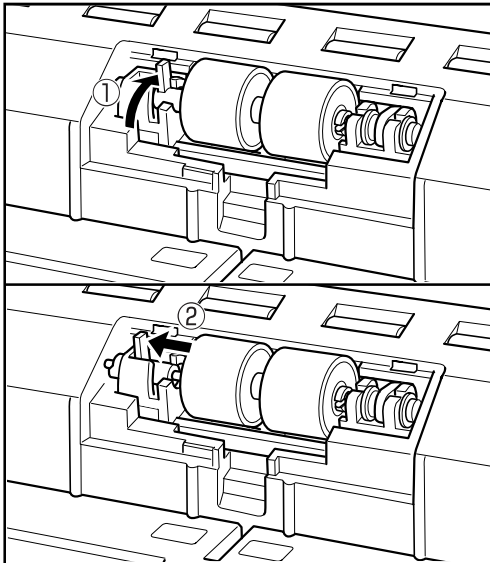


- 4** Move the retard rollers to the left and remove them.

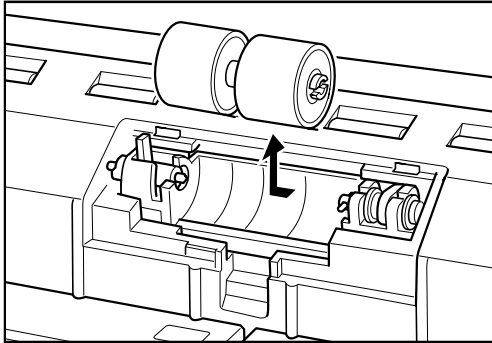


- 5** Set the new retard rollers in place, and align the notch in the roller's axle with the shaft on the scanner.

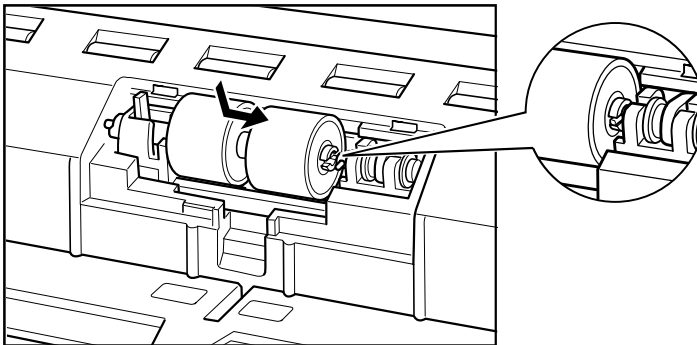


- 6** Slide the roller clamp lever to the right, and push it into the hole in the retard rollers.

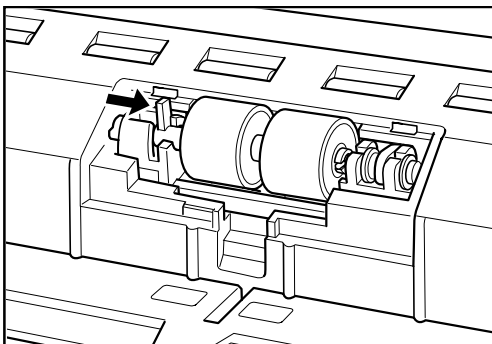

## 7 Pull the lever towards you to clamp the retard rollers in place.

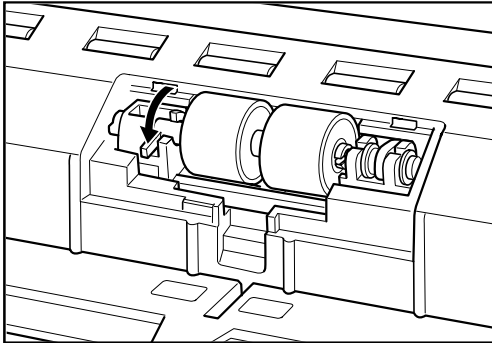

## 8 Put back the roller cover.

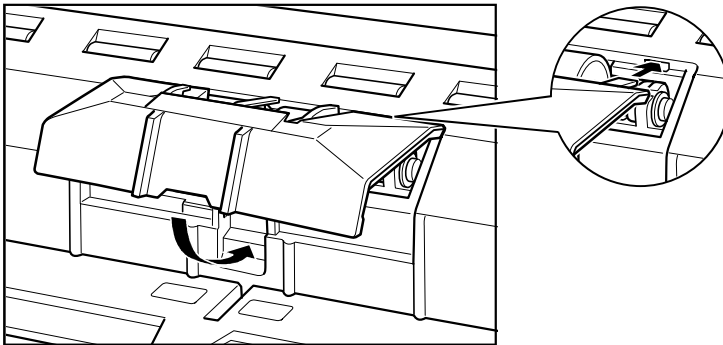

## 9 Carefully close the upper scanner.



CAUTION

- Be sure that the hook is completely latched and the roller cover is not loose. If the roller cover is loose, the document tray will catch on it causing the scanner to not operate correctly.
- Never clean the scanner with any kind of organic solvent, such as alcohol, benzene, or paint thinner. Doing so might cause a fire and electrical shock, or cause the exterior of the scanner to disfigure or discolor.